

# ZLP Electronics

A Ham Radio Deluxe Sponsor

## ICR10 and ICR20 USB CAT interface.



Plug the Radio connector into the radio CAT/extension speaker socket. The audio from the radio will be removed; plug the 3.5mm stereo connector into the PC's sound input and you will hear the radio via the PC. Plug the USB dongle into the PC and follow prompts (if any, to install drivers, allow windows to search the net to obtain latest drivers).

Use the new comport provided by Windows to obtain the CAT connection to the radio.

To test the USB dongle, remove the connecting lead from the dongle (the yellow marker is the connector that fits the dongle; the other fits your radios soundcard). Then run the loopback test, <http://www.g4zlp.co.uk/Downloads/findzlp.ZIP>.

The test is successful and the interface is working correctly if the test reports "Comport[x] appears to be a ZLP cable".