

YLO2A and FT1000MP

To run AFSK - RTTY, PSK, SSTV, Hell, MFSK16 etc etc you should input your audio through the PACKET JACK and press the PKT button on the front of the rig. Yes, you will be LSB. For USB, all you have to do is set the Easy-Set menu item to SSTV-U and then press the USER button on the front of the rig after first pressing the PACKET button. Press PKT once, you're LSB - press it again, and/or hold it longer (can't remember) and you will be in USB. In the MARK-V at least, the LSB light will still be illuminated!! However, you can prove you've changed to USB by watching the frequency display and then you can also tune to a USB voice signal and it will be intelligible!

Use the FT1000 MKV "Easy Set" to configure the 5 pin din socket for USB.